


# MTXCW-5033 Parts List

No.	Part Number	Part Name	Quantity	Remarks
1	L6380B00	Shock Sensor Unit	1	
1-1	3574-017	"O" Ring	(1)	
2	L6380G00	Hood ASSY	1	
3	L6380C00	Nozzle Holder	1	
4	L6380D00	Wire ASSY	1	
5	L7063B00	Torch Body ASSY	(1)	
5-1	3574-007	"O" Ring	(1)	
5-2	L7062B04	Spacer	1	
6	L6571D00	Water Hose (1)	(1)	6m
7	L6571E00	Water Hose (2)	(1)	8m, OPTIONAL
8	L6571F00	Water Hose (3)	1	10m, OPTIONAL
9	U4430P04	Nut	1	
10	U4430N00	Insulator	(1)	
10-1	3574-003	"O" Ring	(1)	
10-2	3574-006	"O" Ring	1	
11	BWW-625	Wave washer	1	
12	U4430P01	Nut	1	
13	U4430P02	Tip Nut	1	
14	U4167H10	Tip (1.6 mm)	(1)	
15	U4167H12	Tip (1.2 mm)	1	OPTIONAL
16	U4430H00	Nozzle ASSY	(1)	
16-1	U4430H06	Insulator Sleeve	(1)	OPTIONAL

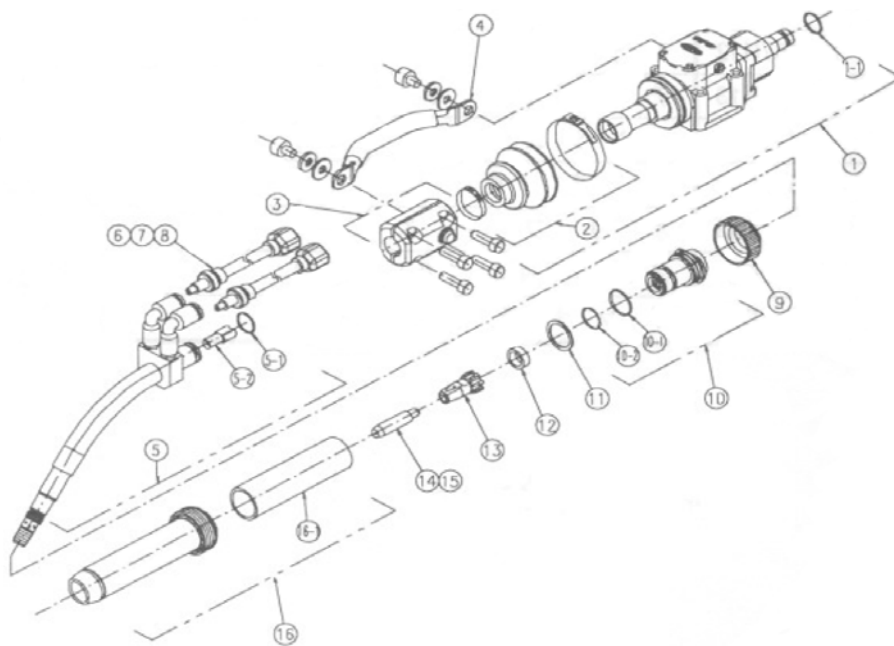

MTXCW-5033 Parts Diagram